



RADIOSS User's Code Interface

2017 version – January 2017

Writing in Output Files

Chapter 7



Altair Engineering, Inc., World Headquarters: 1820 E. Big Beaver Rd., Troy MI 48083-2031 USA
Phone: +1.248.614.2400 • Fax: +1.248.614.2411 • www.altair.com • info@altair.com

7.0 Writing in Output Files

Some user subroutines do not pass the IOUT file descriptor and, thus, do not permit writing in a RADIOSS output file. In this case, the WRITE_IOUT function below can be used.

```
CALL WRITE_IOUT(LINE,LINE_LENGTH)
```

where:	LINE	Character string with the message.
	LINE_LENGTH	Integer that indicates the length of a character string.

Example:

```
CHARACTER*256 LINE
INTEGER LEN

WRITE(LINE,'(A)') 'THIS IS MY LINE IN OUTPUT FILE'
LEN = LEN_TRIM(LINE)      ! Fortran Intrinsics to compute line length
CALL WRITE_IOUT(LINE,LEN)
```